

AUSTRALIA'S MOST USED AND MOST ECONOMICAL LOW SUDS CLEANSER SACHETS

For perfect results EVERY time, use Glassmaids Low Suds Cleanser sachets. A powder concentrate for use with Glassmaids Glass washer scrubber machine.

ECONOMICAL

Just 1 sachet to 26L of water
Cleans up to 26 trays of glasses

PORTION CONTROLLED

Correct dose - no waste
Powder stays freshly sealed
No expiry date when kept in cool dry space

GENTLE ON HANDS

Completely neutral formula

SUPERIOR WETTING QUALITIES

Glasses rinse free of film, drain faster and will not leave spots

**GLASSES ONLY NEED ONE RINSE
SOLD AS A MINIMUM 100 SACHETS
AUSTRALIAN MADE PRODUCT**

DIRECTIONS FOR USE

1. Clean sink or tub prior to scrubbing glassware.
2. Fill sink or tub to just under the top of the four outside brushes with cold or warm water.
3. Tear open 1 sachet of Glassmaids Low Suds Cleanser and sprinkle into water.
4. Turn machine on, to mix solution through the water.
5. Discard any liquids, ice or fruit from the used glass.
6. Place glass over the middle brush ensuring the glass is being cleaned from the top to bottom removing all residues on the inside and outside of the glass to give a thorough clean.
7. Remove the glass from the brushes and plunge the glass bottom end first into a tub or sink of clean water to rinse the glass.
8. Place the rinsed glass into a sanitiser solution, then place the glass upside down onto a corrugated surface to dry.



info@glassmaid.com.au
www.glassmaid.com.au



facebook.com/glassmaid
0419 706 914